

# PK CCD setting and trouble shooting

### 1. First need to select the right type of machine model and CCD.

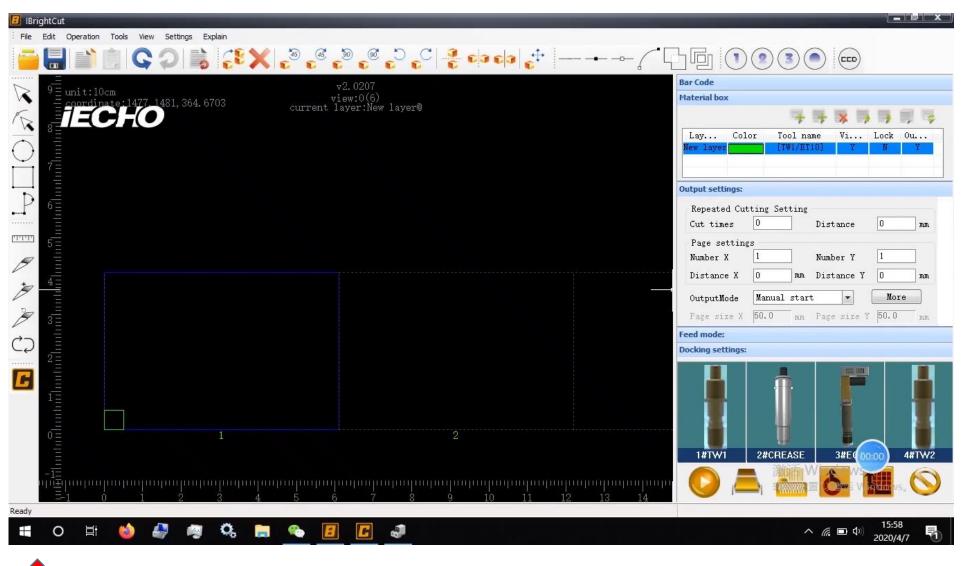

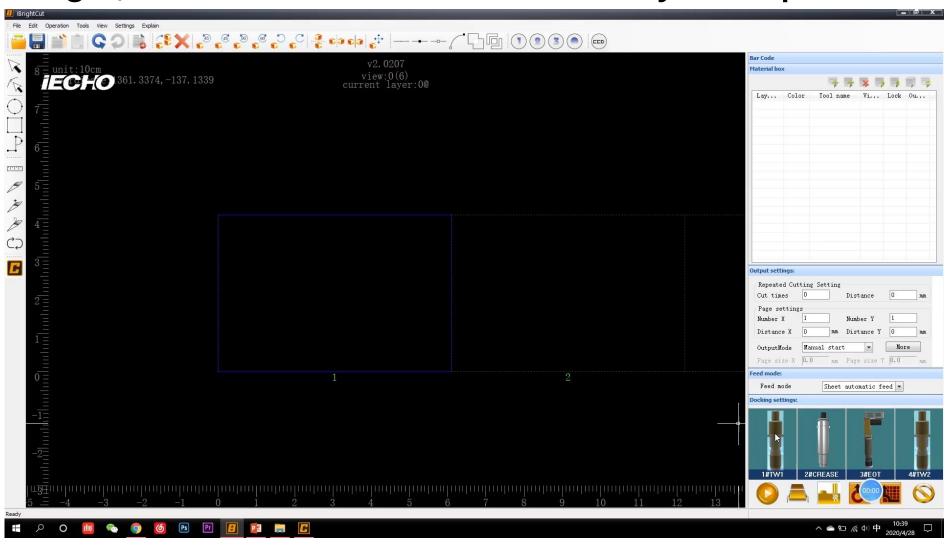

2. Cut a square which specify the length and the width of the rectangle, then set offset of the camera by the square.



## Trouble shooting

## Fault description:

1: The camera connection failed.

2: Can not recognize the USB port.

2: The camera vision shows in iBrightcut is not clear.

#### Check the cable connection:

- 1. First check the camera cable connection with the PC.
- 2. Check the camera cable in the cutting head.(Check the video)






PC shows a window that can not recognize the USB port when you plug the camera cable.

- 1. Please be sure the USB port is 3.0 of your PC.
- 2. Change the PC and try again, if it still can not be recognized that means the camera cable should be broken or the camera board broken.



#### Camera vision is not clear:

1. Open the camera and adjust the effect. (check the video)

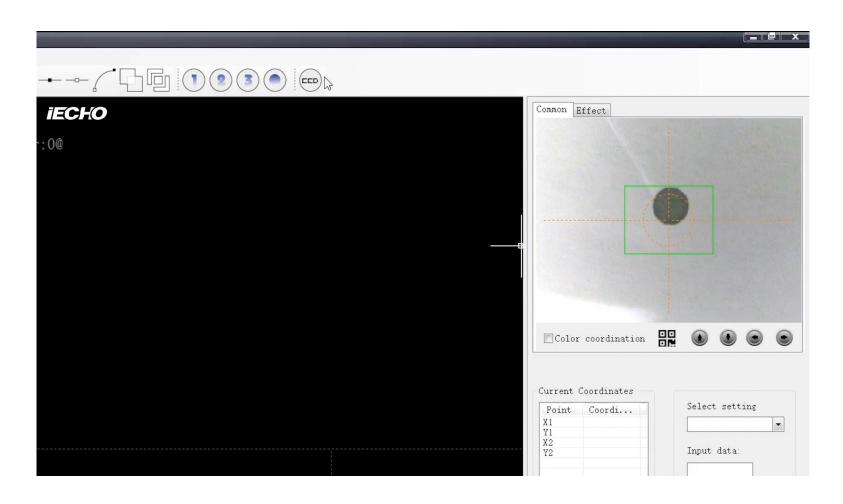



## 2. Adjust the focus of the camera.

