


# Gantry slowly move back or hit the edge


## Fault description:


The gantry slowly moves to backside or hit the edge when machine is turn on, can't finish reset.

### **Solution:**

 Check the X, Y original sensor. When the machine turned on, there is a red light on the sensor. When something sheltered the sensor, light off.
Try use air or brush clean the sensor.

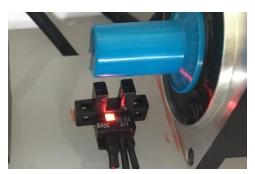

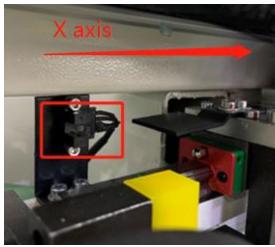

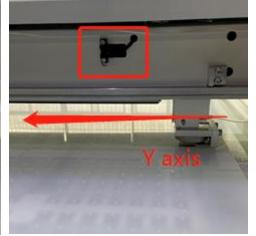

**BKL** X axis original point sensor

Y axis original point sensor

Tel: +86-571-8660 9560

Fax: +86-571-8669 8923



2. Check the cable of the sensor. (From sensor to circuit board)



#### X sensor:

X sensor connect on C board then go to connect with power board.

Tel: +86-571-8660 9560

Fax: +86-571-8669 8923






When the X sensor is sheltered, on the power board D5 LED will be light



#### Y sensor:

Y sensor connect on A board then go to connect with power board

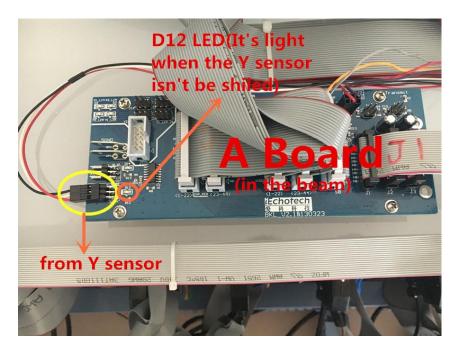

When the Y sensor is sheltered, on the power board D3 LED will be light

Tel: +86-571-8660 9560

Fax: +86-571-8669 8923



Tel: +86-571-8660 9560

Fax: +86-571-8669 8923



3.If check all cables and sensor are good, still no signal, change the circuit board.