



Error 70

- 1. Error 70 shows in cutterserver**
- 2. The driver shows the alarm “AL-006” or “AL-009” in the main box.**


When the driver shows the AL006 or AL009 ,please check the power cables from driver to B board.

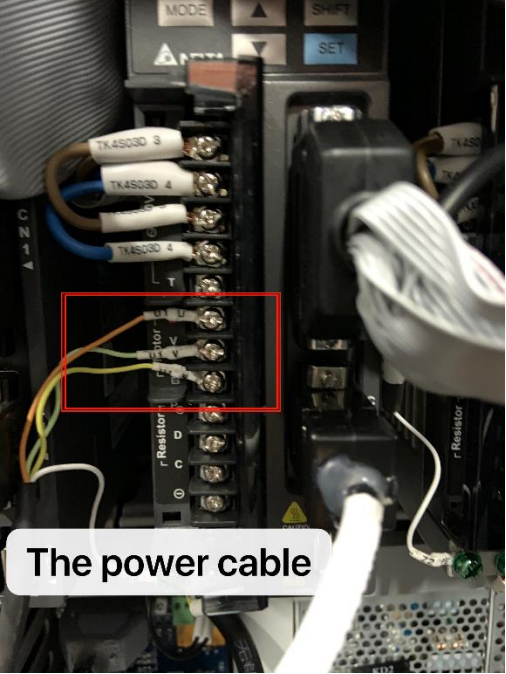

DRIVER

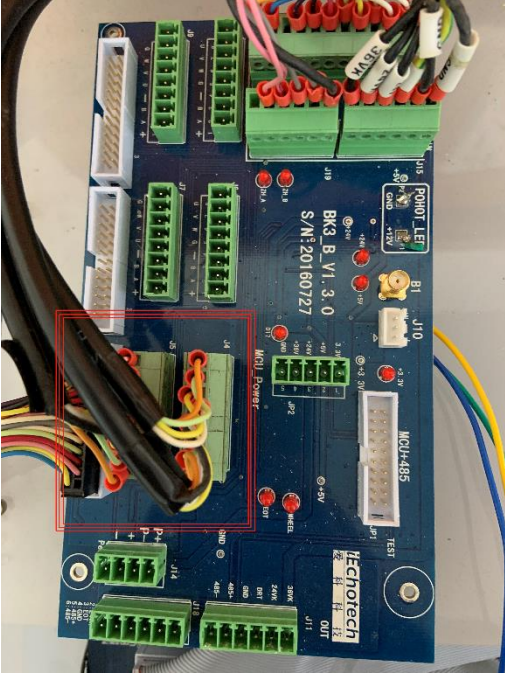


B BOARD

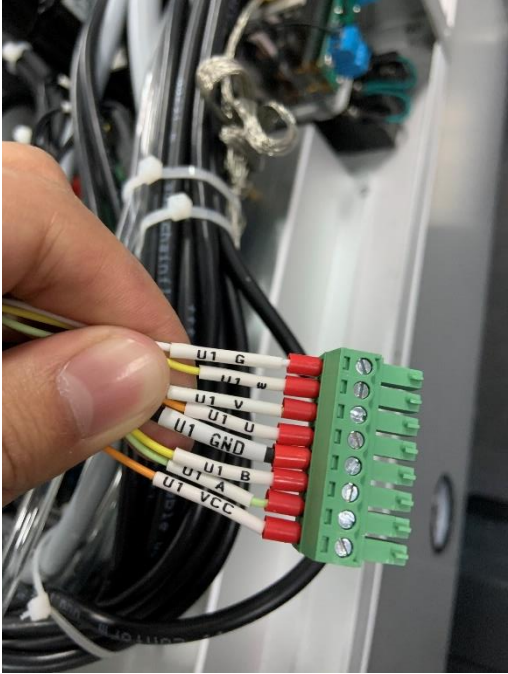

CABLE (marked with U,V,W)

Here is the example: U1 driver shows the alarm “AL006” or “AL009” ,then find the cable marked with U1 which connect with B board. Check the cables marked with U,V,W by multimeter.

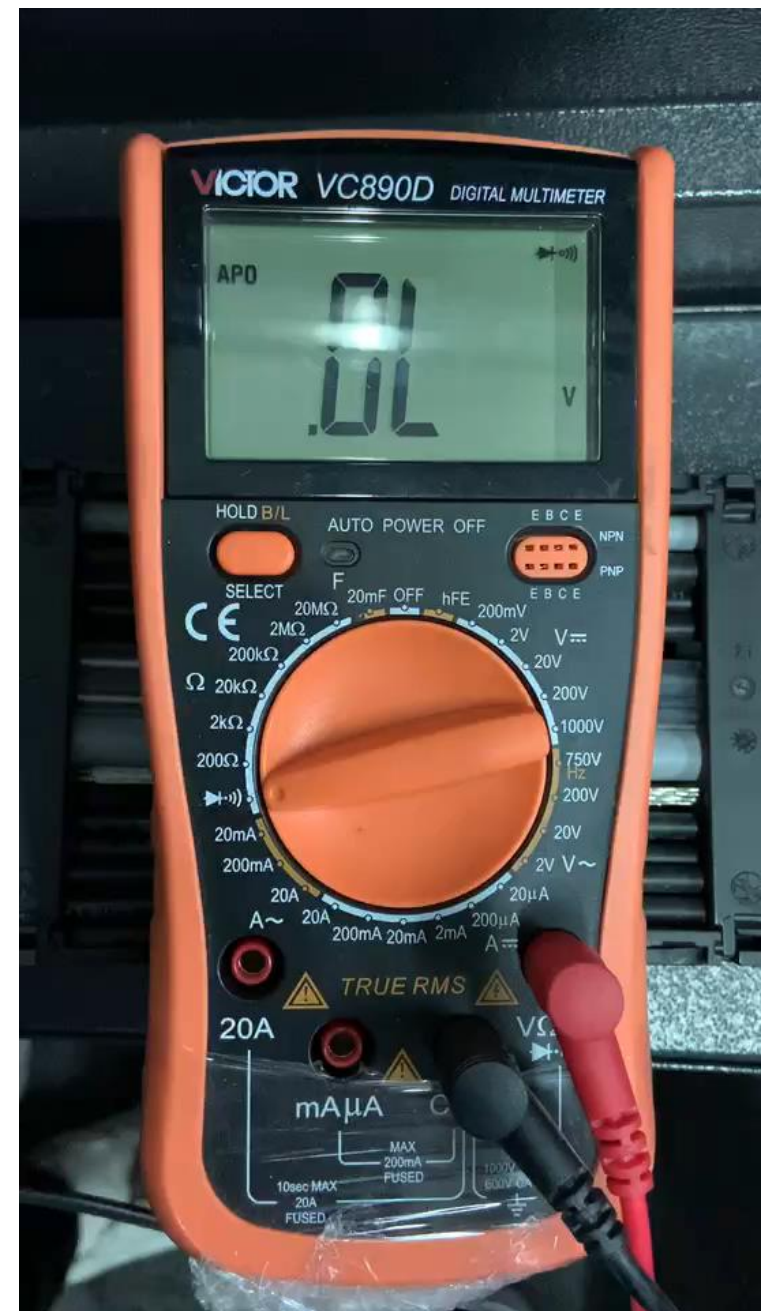

Check the video here 